


DEMONTAGE

DISMANTLING



Du erhältst diese Demontageanleitung für alle Rollhocker-Modelle.
You receive the dismantling instructions for all rolling stool models.

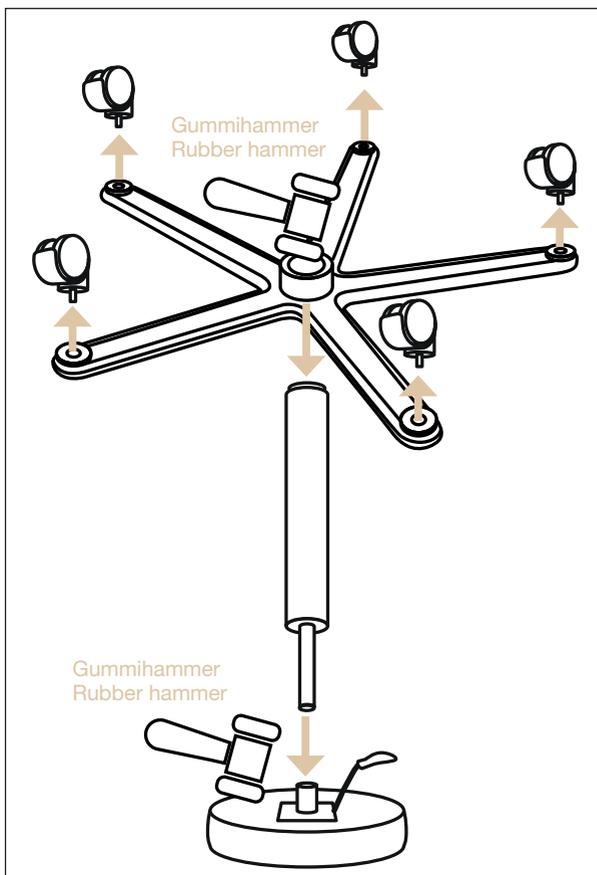

! Info: Die Montage eines Rollhockers erfolgt werkzeuglos. Dabei presst sich die Gasfeder durch die konische Form unten in das Fußkreuz sowie oben in die Sitzplatte.

Zur Demontage muss die Gasfeder wieder gelöst werden. Schläge mit einem Gummihammer oben auf die Befestigungsplatte unter dem Sitz. Anschließend schlage die Gasfeder von unten aus dem Fußkreuz. Tipp: lege hierfür zuvor ein Stück Holz auf den Boden der Gasfeder. So schließt Du mögliche Beschädigungen aus und vereinfachst das Lösen der Komponente.

! Information: A stool is assembled without tools. The gas cylinder presses through the conical shape at the bottom of the star base and at the top of the seat plate.

The gas cylinder must be released again for disassembly. Use a rubber hammer to hit the mounting plate under the seat at the top. Then knock the gas spring out of the base from below. Tip: first place a piece of wood on the bottom of the gas spring. This prevents possible damage and simplifies loosening the component.

